



AGW SOFTWARE CONFIGURATION

Pre-install

- Open web browser and navigate to <http://www.sv2agw.com/>
- Click on Downloads
- Look for section called AGW Packet Engine and download "AGWPE.ZIP"

NOTE: When you are done configuring AGWPE you will have to restart AGWPE for changes to apply.

Step 1: Extract AGWPE Program Files to c:\ham\agw

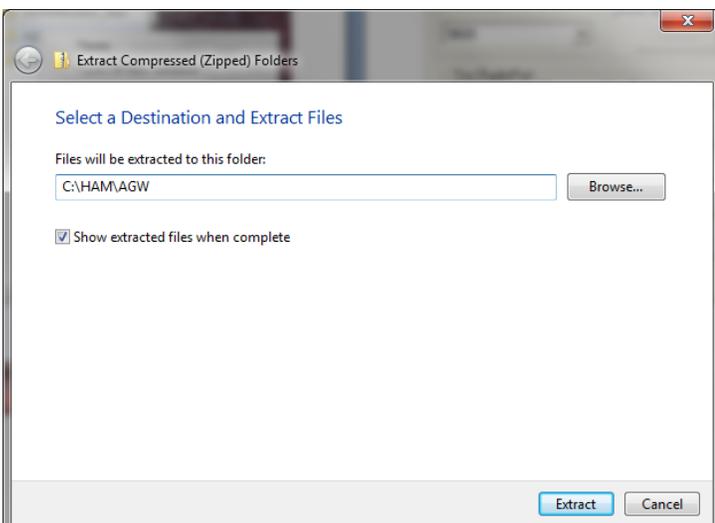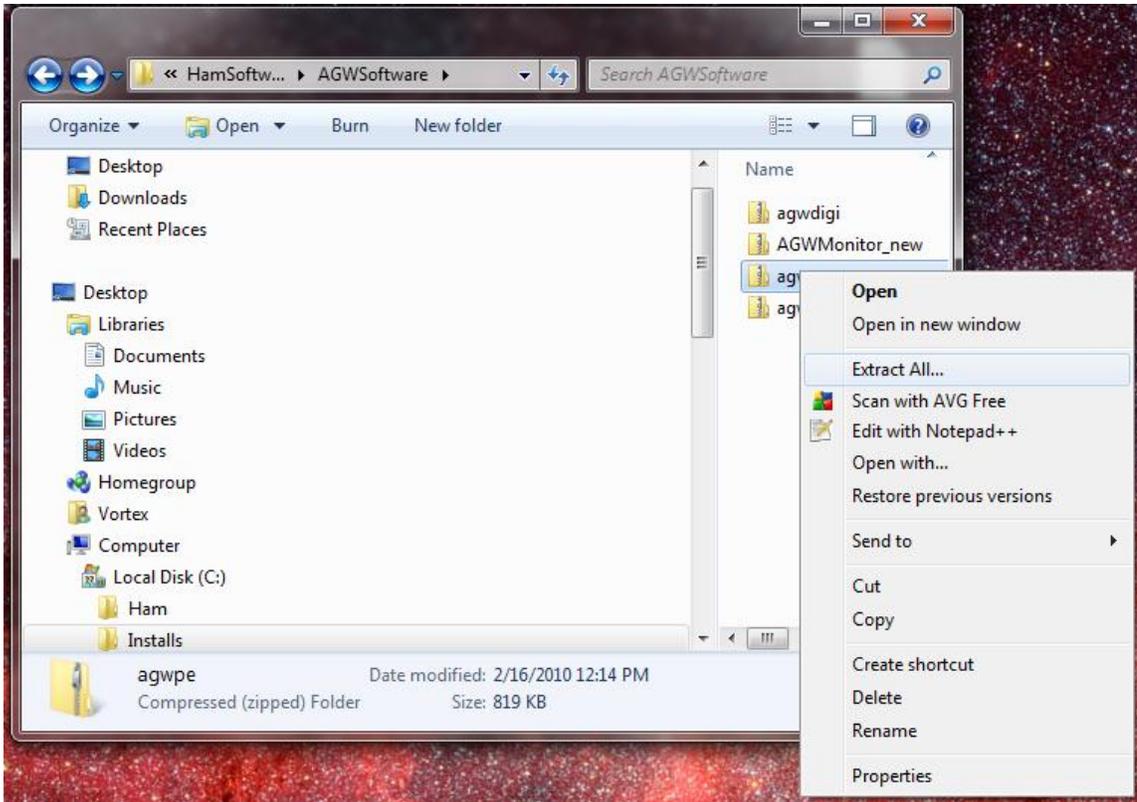

AGW SOFTWARE CONFIGURATION

Step 1a: Configure TNC

- On the system tray right click on AGW Icon and choose properties
- Click on New Port
- Choose Comport
- Choose Baudrate
- Choose TNC Type
- In Port 1 Choose Descriptive Name

Properties for Port1

Tnc Setup | Tnc Commands

Select Port: COM7

Be carefull for Modems like Baycom etc need also the Baudrate.

SerialPort/modem BaudRate: 9600

Tnc Type: Select Your Tnc Model. PK96

Tnc Sub Type: Select The special KISS Mode. KISS Simple

Options

Tnc Control Commands

IniKiss1:

IniKiss2:

IniKiss3: KISS ON

ExitKiss On Exit:

SinglePort

DualPort

Quadruple Port

Tnc RadioPort


Port Description (Frequency,BaudRate etc)	Ports Kiss Id
Port1: 144.930Mhz 1200baud	0
Port2: <input type="text"/>	0
Port3: <input type="text"/>	0
Port4: <input type="text"/>	0

OK Cancel


AGW SOFTWARE CONFIGURATION

Step 1b: Configure Soundcard - Tigertronics Signal Link USB

- On the system tray right click on AGW Icon and choose properties
- Click on New Port
- Choose Comport (Not Used By Sound Card)
- Choose Baudrate (Not Used By Sound Card)
- Choose TNC Type as "Soundcard".
- In Port 1 Choose Descriptive Name

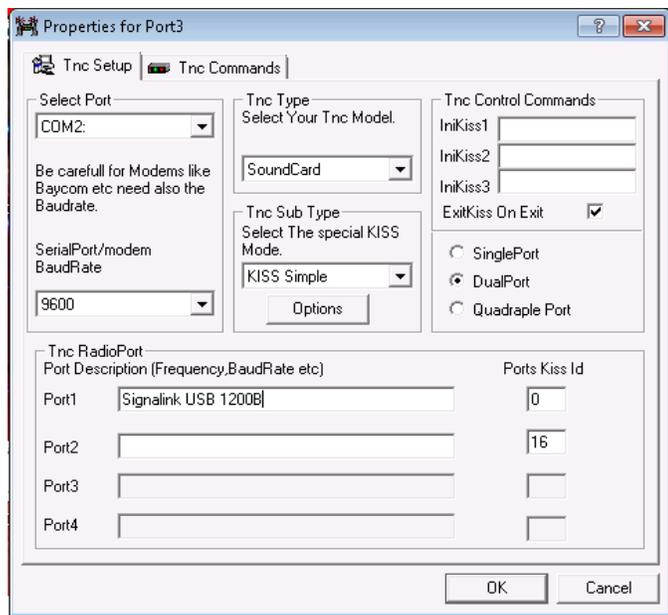


- Pick the sound card interface from the drop down

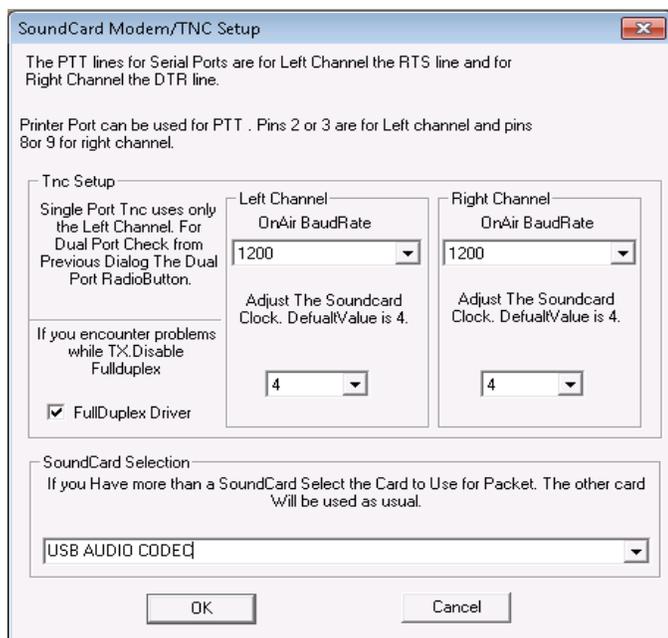

AGW SOFTWARE CONFIGURATION

Step 2: Verify that Accept Without Login only from My Computer Selected

- On the system tray right click on AGW Icon and choose Setup Interfaces

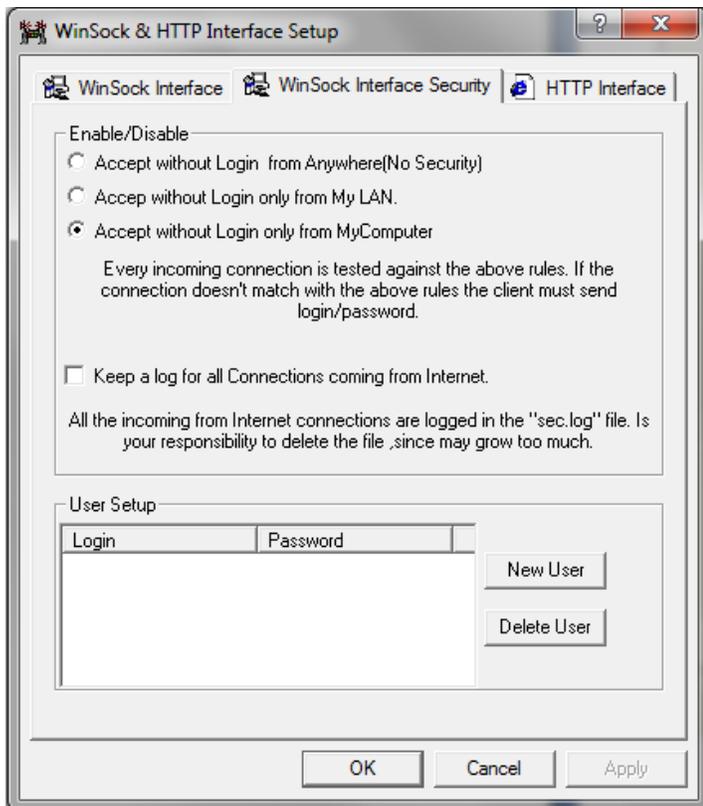

Step 3: Verify Settings



AGW SOFTWARE CONFIGURATION

Trouble Shooting

How to reset AGW back to initial install mode.

- Shutdown AGW
- Navigate to AGW Install directory
- Delete all files with port0-9.ini
- Delete agwpe.ini
- When you restart AGW it will run the initial configuration again.

